

ZW3320A, ZW3320B, ZW3320C Remote Control Searchlight



IP66

-20 °C

+50 °C



Application

It is ideal to be used in the wild, road or on the sea for searching, patrol, rescue etc.

Characteristics

- ZW3320A and ZW3320B use HID super-white light source, which has high light efficacy and low power consumption. It saves 25% energy than the normal light source. The average service life is above 12,000hours. Reduce the maintenance cost.
- Imported high-purity aluminum reflector that adopts professional light distribution design promote the reflection efficiency, and extend the lighting distance.
- Wireless remote control mode. The lamp can be operated within 30meters by the remote control.
- The searchlight gives a full 360° horizontal rotation, 180° vertical tilt.
- A magnet base is attached to the bottom of the lamp. That enable the lamp can fitted on the top of the vehicle. It can meet needs of car driving speed at 80KM/h.
- Its lightweight and small size make the light easy to handle and save lots of space. When press the reset button on the remote controller, the lamp will fold automatically.
- 220V power converter or 12V/24V reserved battery are optional as input power supply according to the customers' requirement .

Main specification

Specification	Unit	ZW3320A	ZW3320B	ZW3320C
Rated Voltage	VDC	9~28	9~28	12
Light Source	W	35W	45W	100W
Light Output	lm	3,200	4,100	2,500
Service Life Of Bulb	h	12,000	12,000	1,000
Remote Charge Distance	m	30		
Horizontal Turning Angle	Degree	0-360		
Vertical Turning Angle		0-180		
Dimension	mm	370×315×187		
Net Weight	Kg	4.6	4.6	4.5




Adaptor



Controller

Drawing of dimension

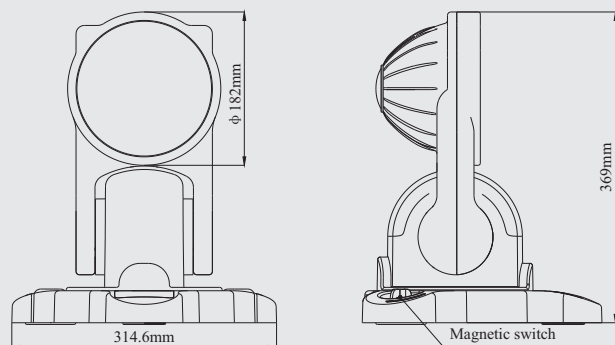

Av. Ho Chi Min n° 1960 | Maputo - Mozambique
 (+258) 82 5935791 – (+258) 82 7340017 – (+258) 84 0489712
 mpequipamentos@gmail.com | www.mpequipamentos.co.mz
 NUIT: 400385157